




Battery installing guide for EV4 City Quad

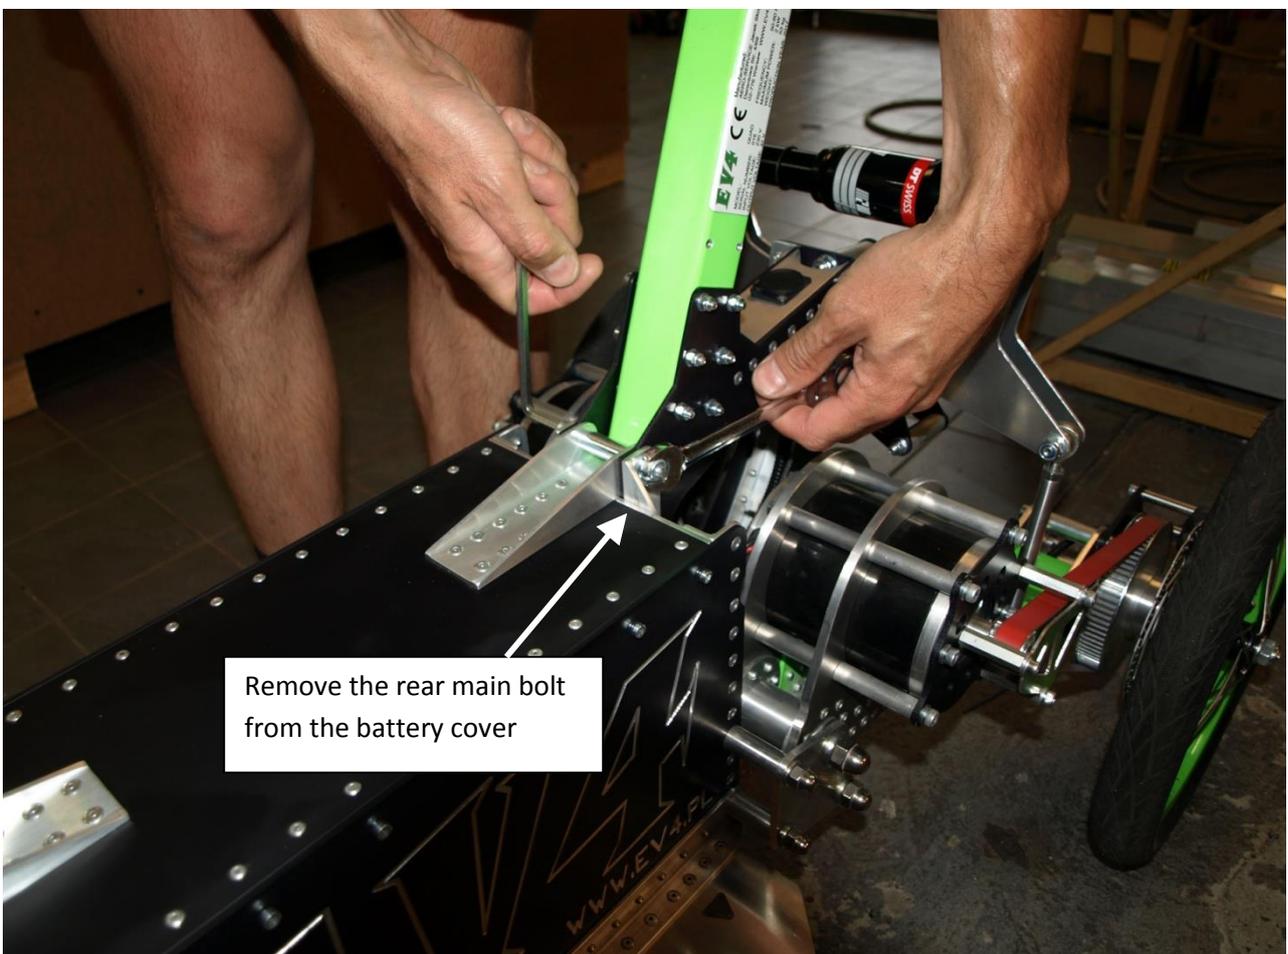

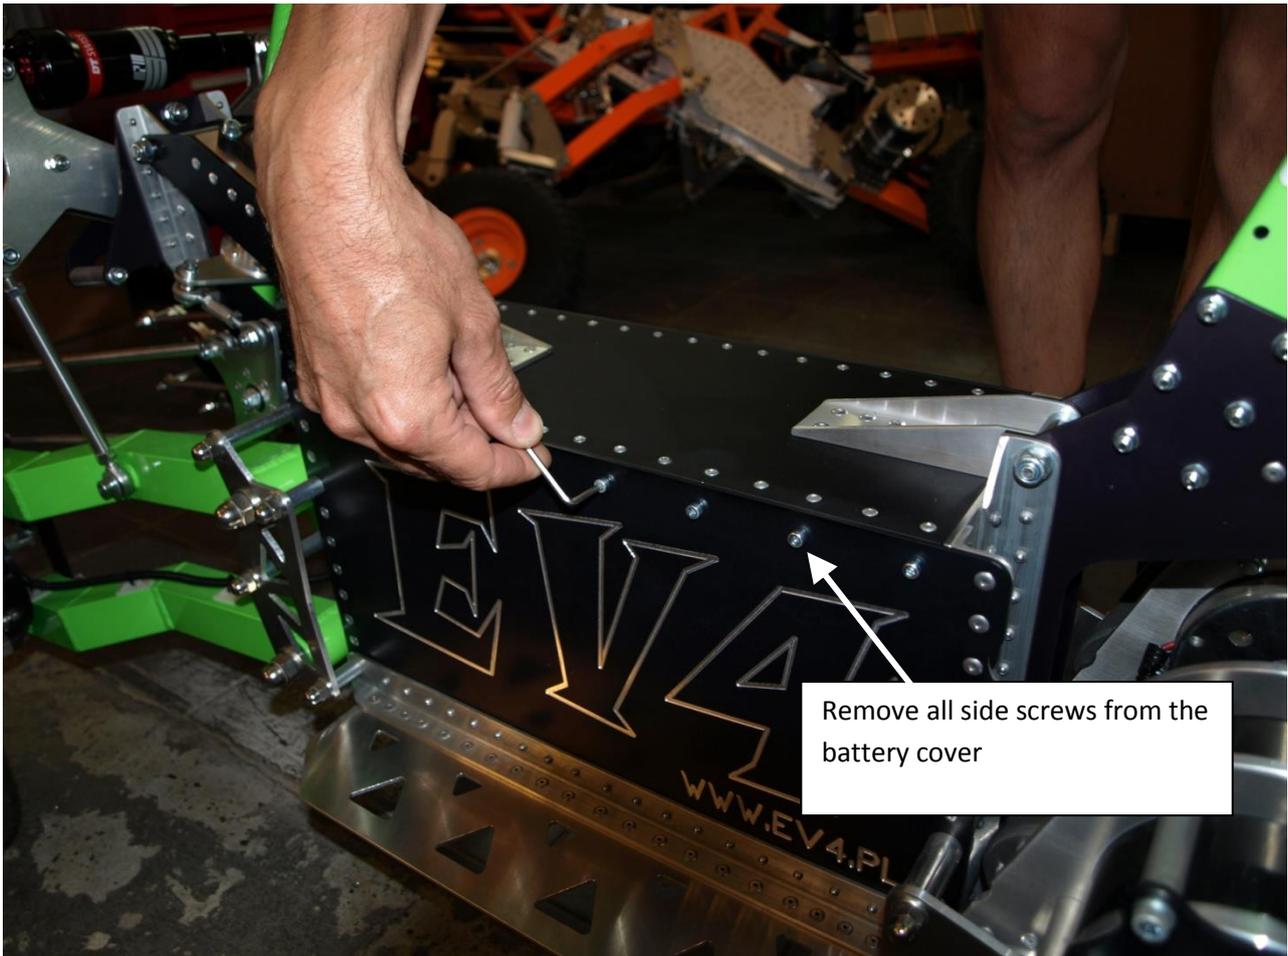


Remove the front main bolt from the battery cover

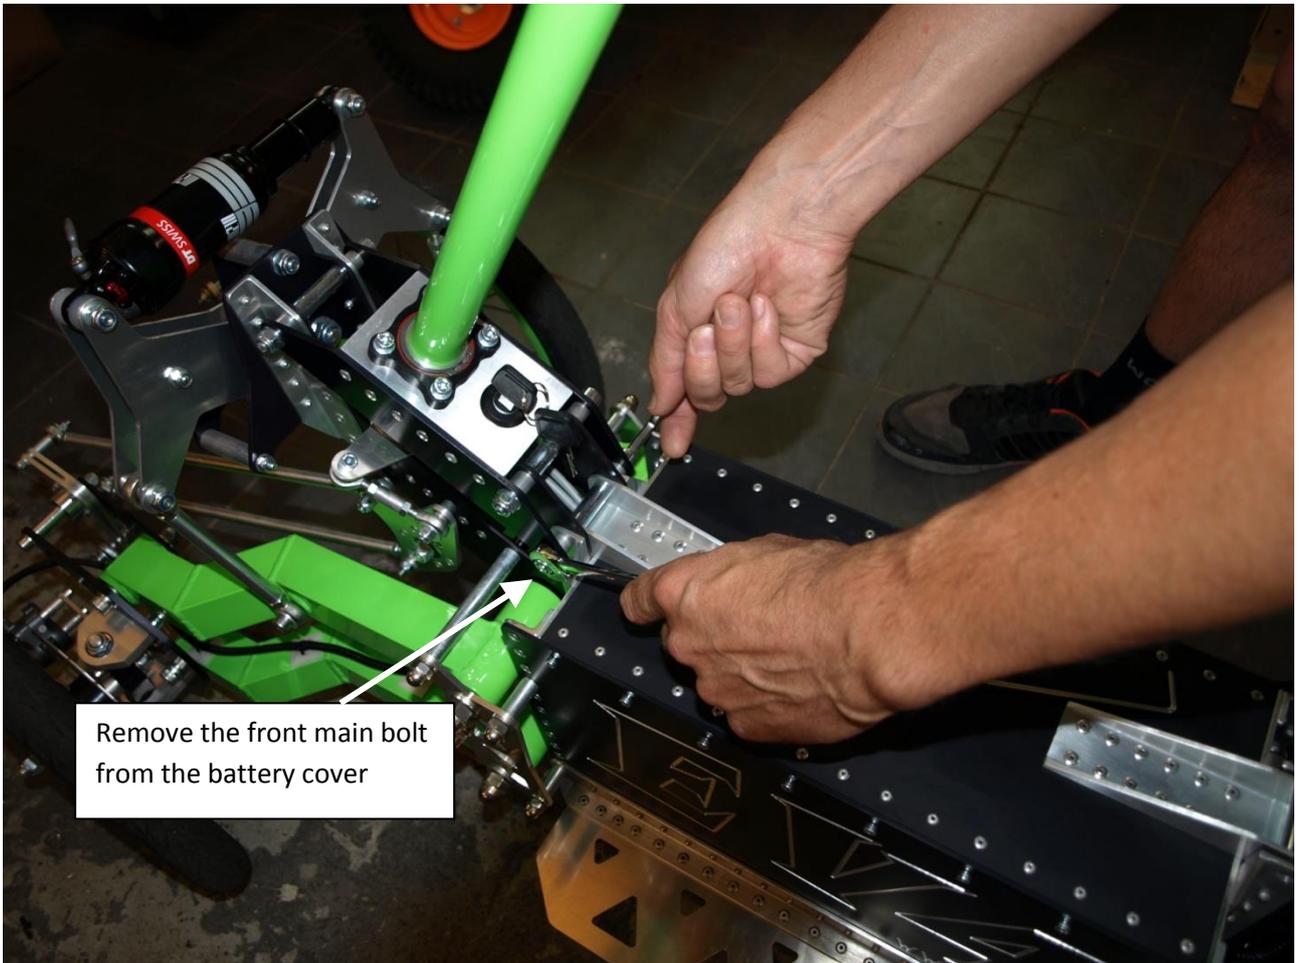


Lift the battery cover and remove it completely together with the controller. The cables are not connected.


On the front and rear of the battery casing there are cables going into the casing. Because the battery is a tight fit you need to remove the cables with the rubber protection and move them out of the way.

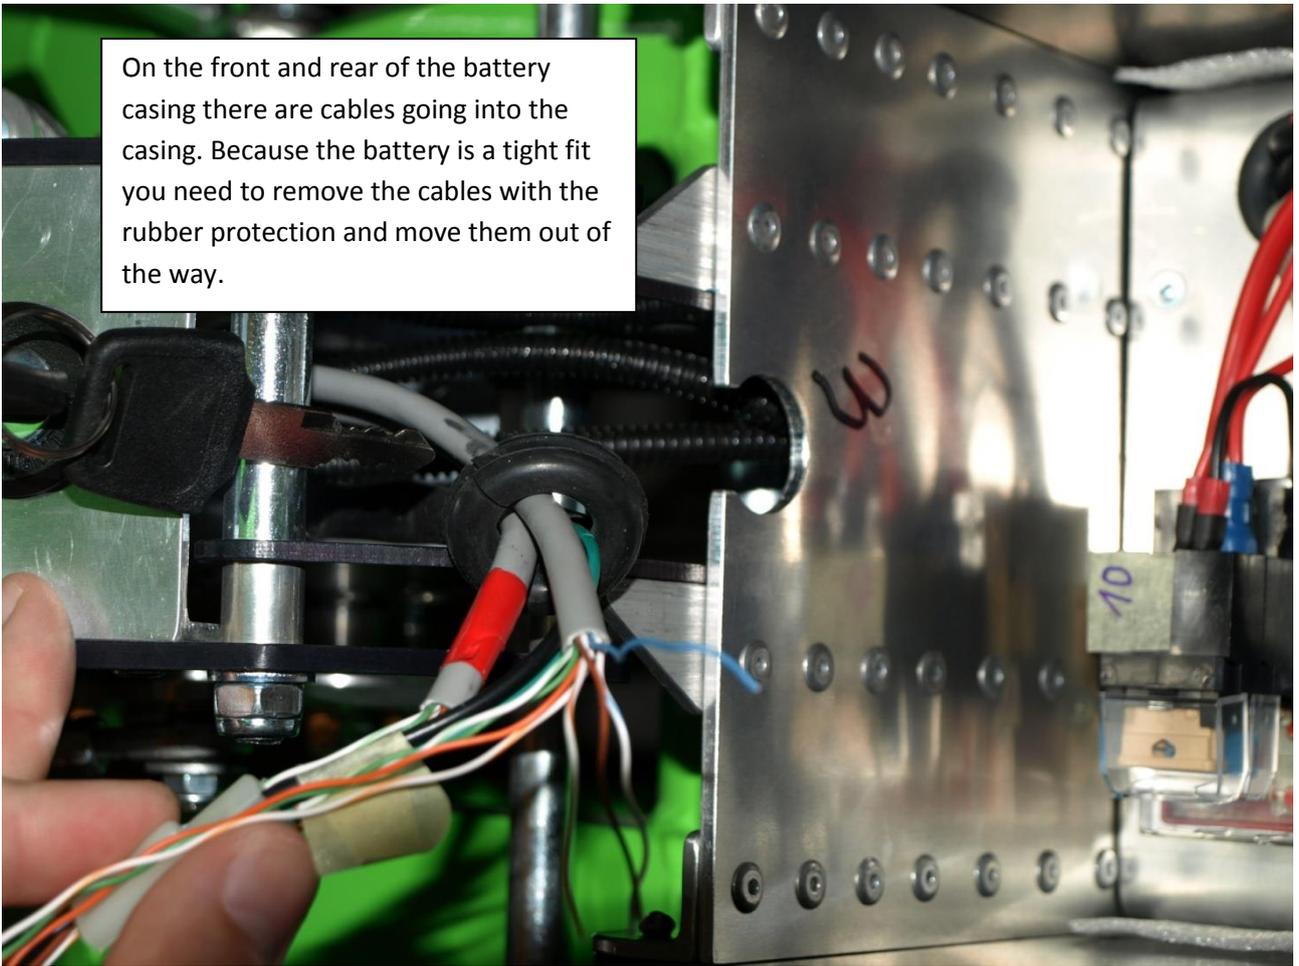


The case is now ready to insert the battery. The foam protection is very important so make sure you place it correctly. It's good to wrap the bottom of the battery with it before insertion.

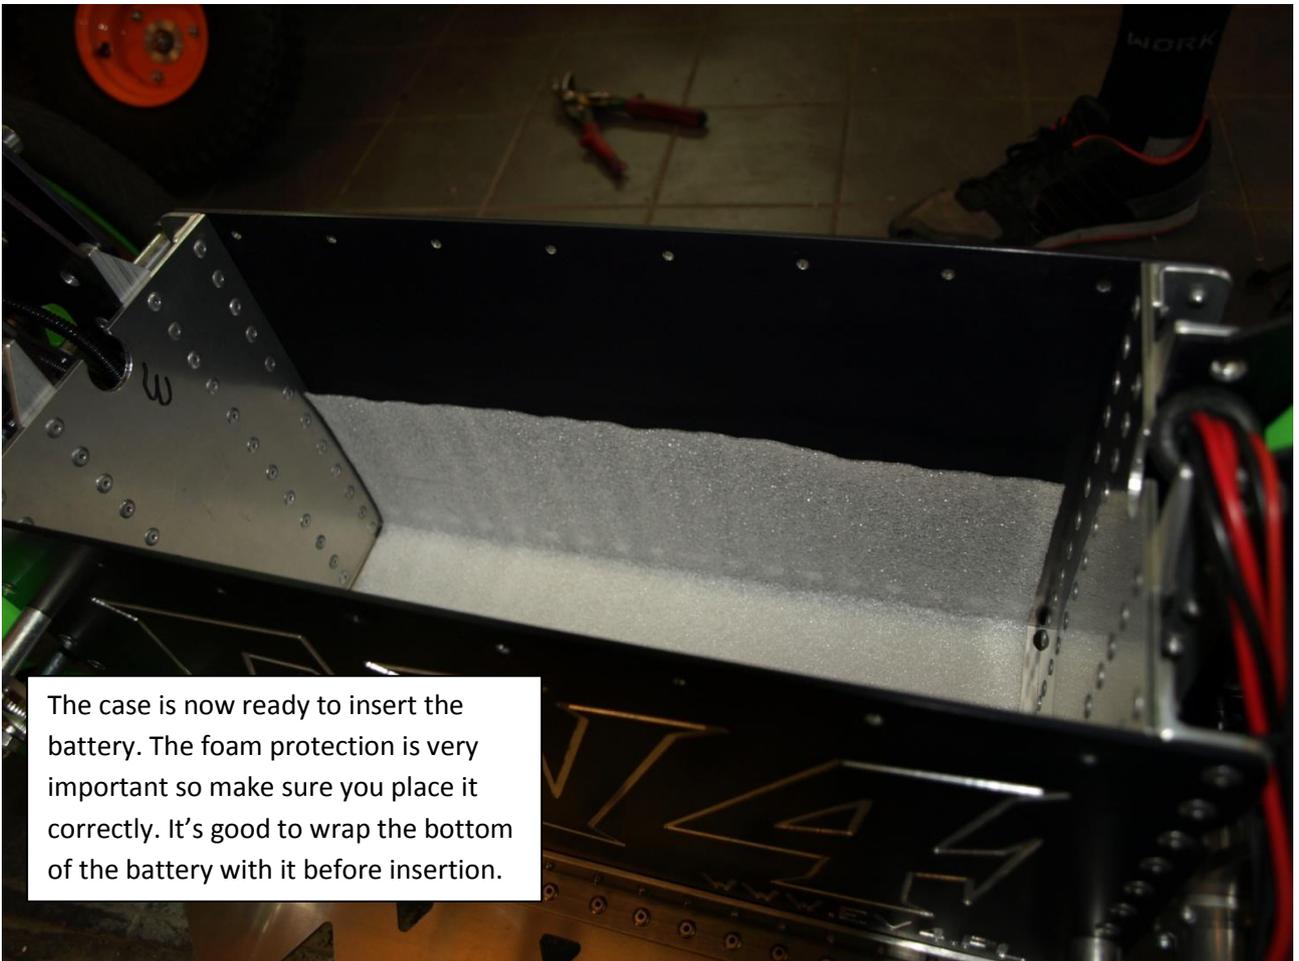


This is how the battery looks after it is correctly inserted

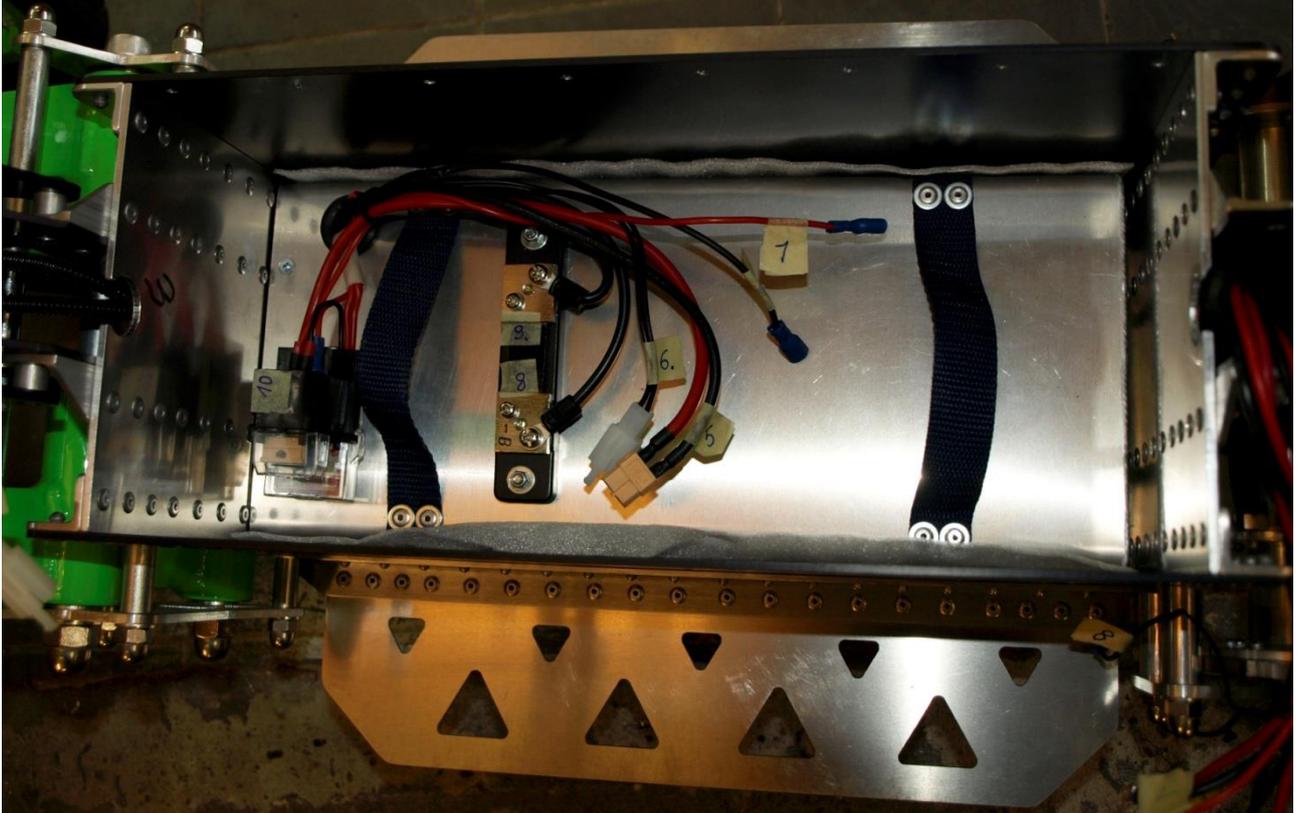

Once the battery is inserted reinsert the cables back into the casing making sure that the rubber protection is in place.

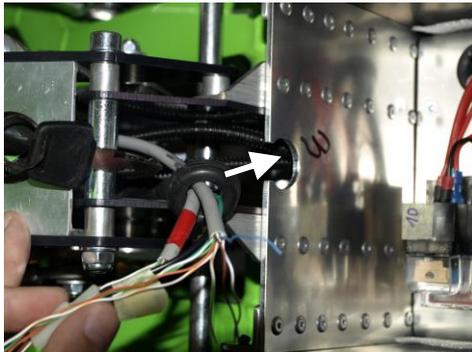


Next, attach the casing cover with the front main bolt (picture on the right). Tighten the nut for now to keep the cover in upright position. This will allow you to connect all cables without having to hold the cover.

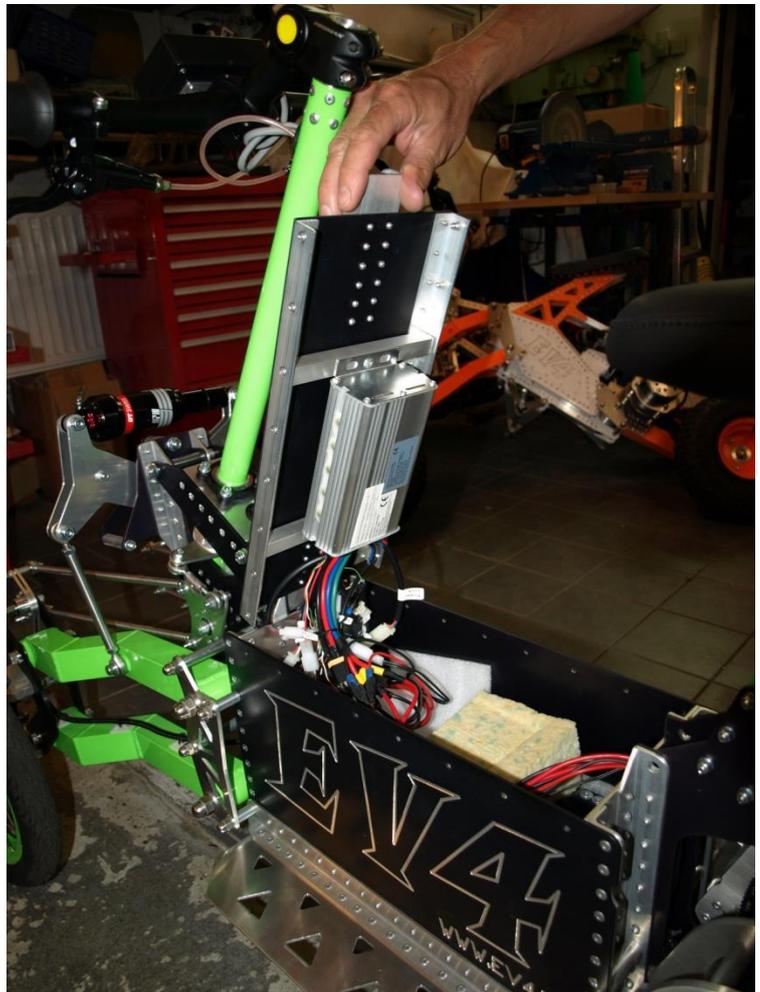


All relevant cables have been **marked with numbers** to help with proper connection. Connect them carefully. Cables that don't have a number don't need to be connected to anything.


We recommend using small amount of isolation tape to wrap all of the connectors. This is to ensure that they don't disconnect or short circuit during use.

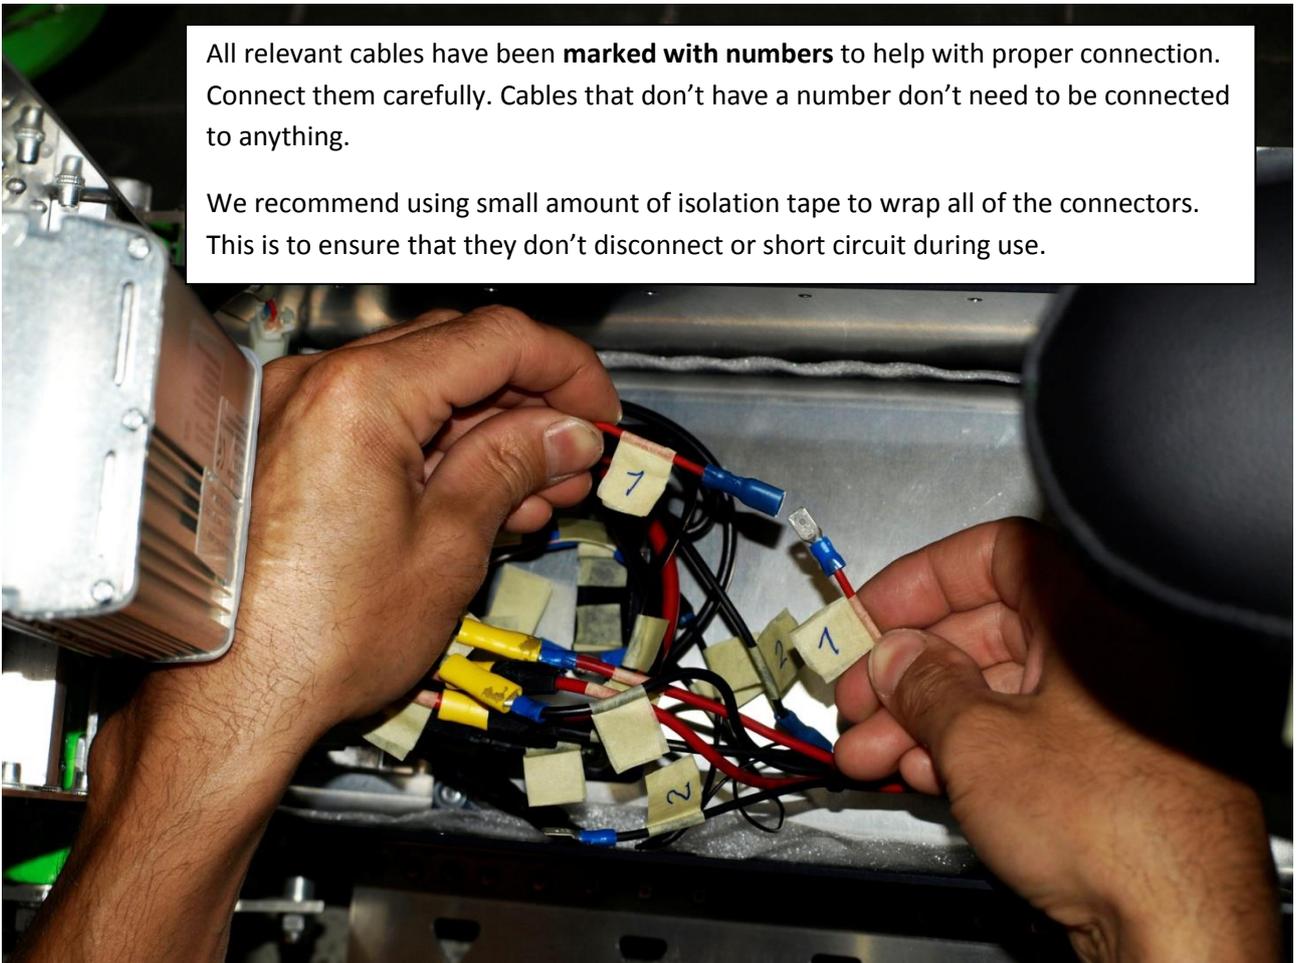


Place the protection foam between the battery and loose cables. The big sponge is placed in the open area behind the cables.

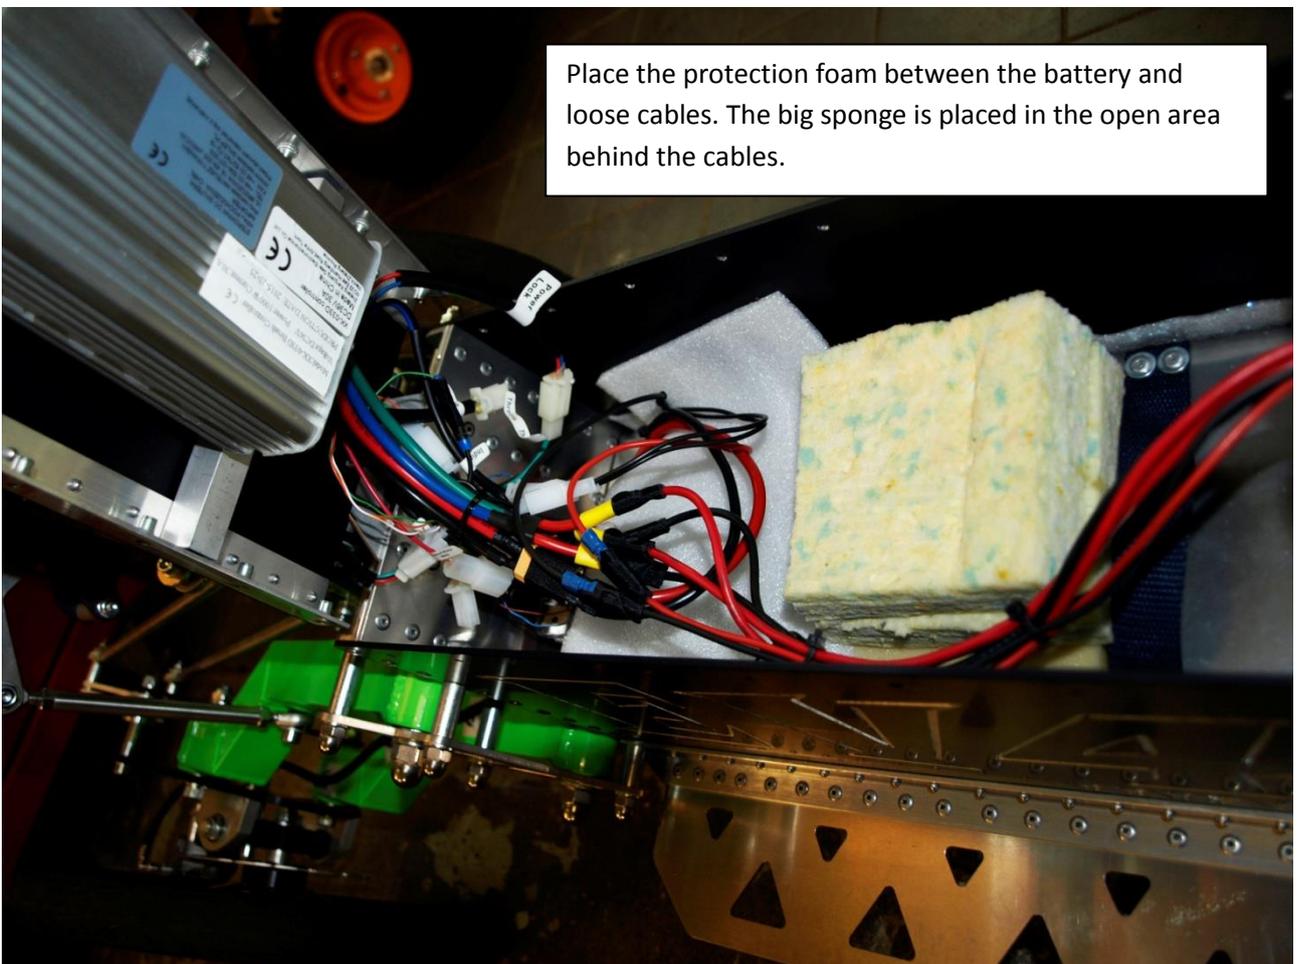


Loosen the front main bolt and close the cover.

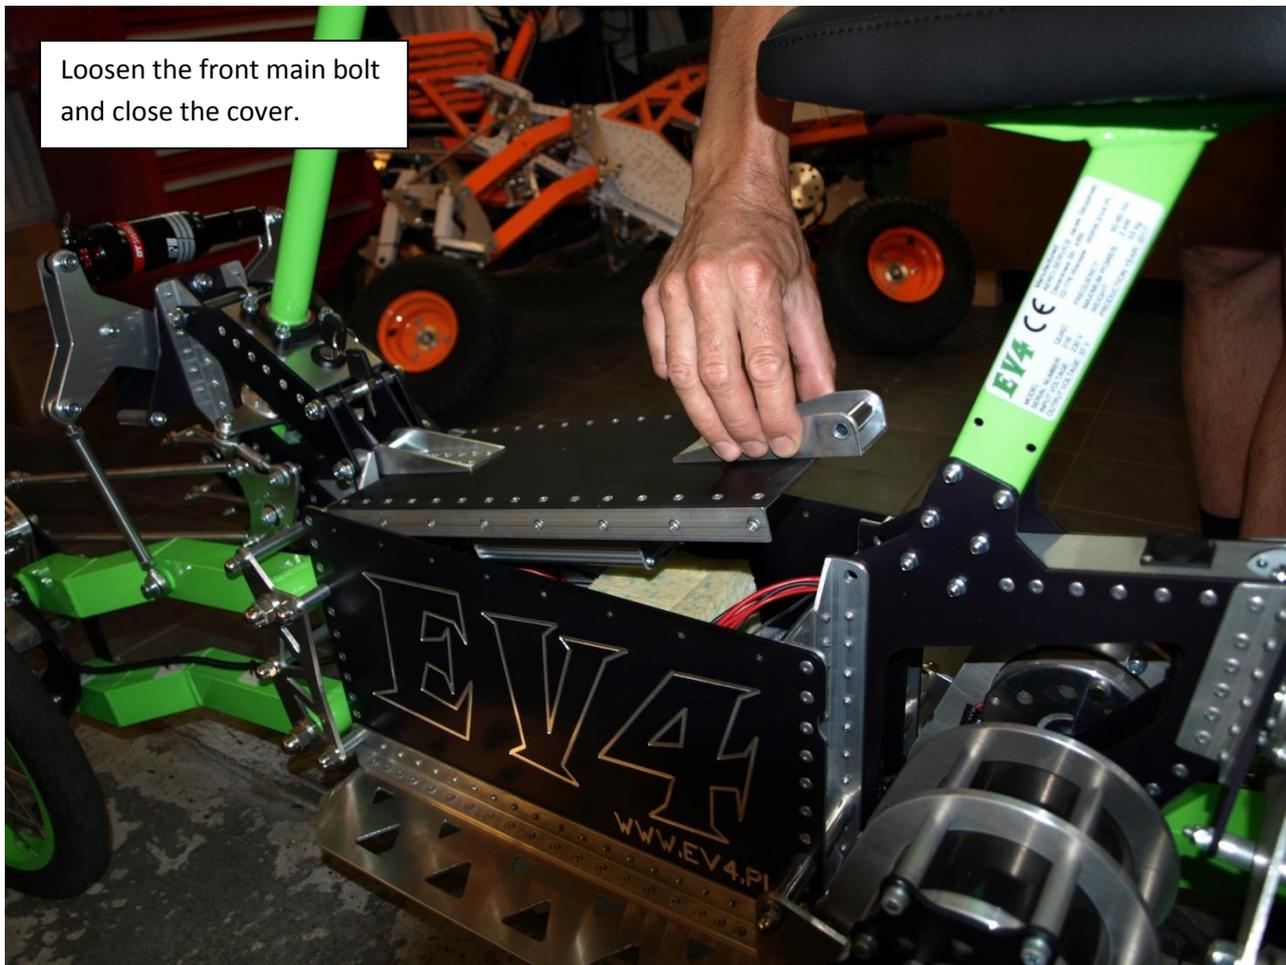

Secure the cover with rear main bolt. Don't forget to tighten the front one as well.

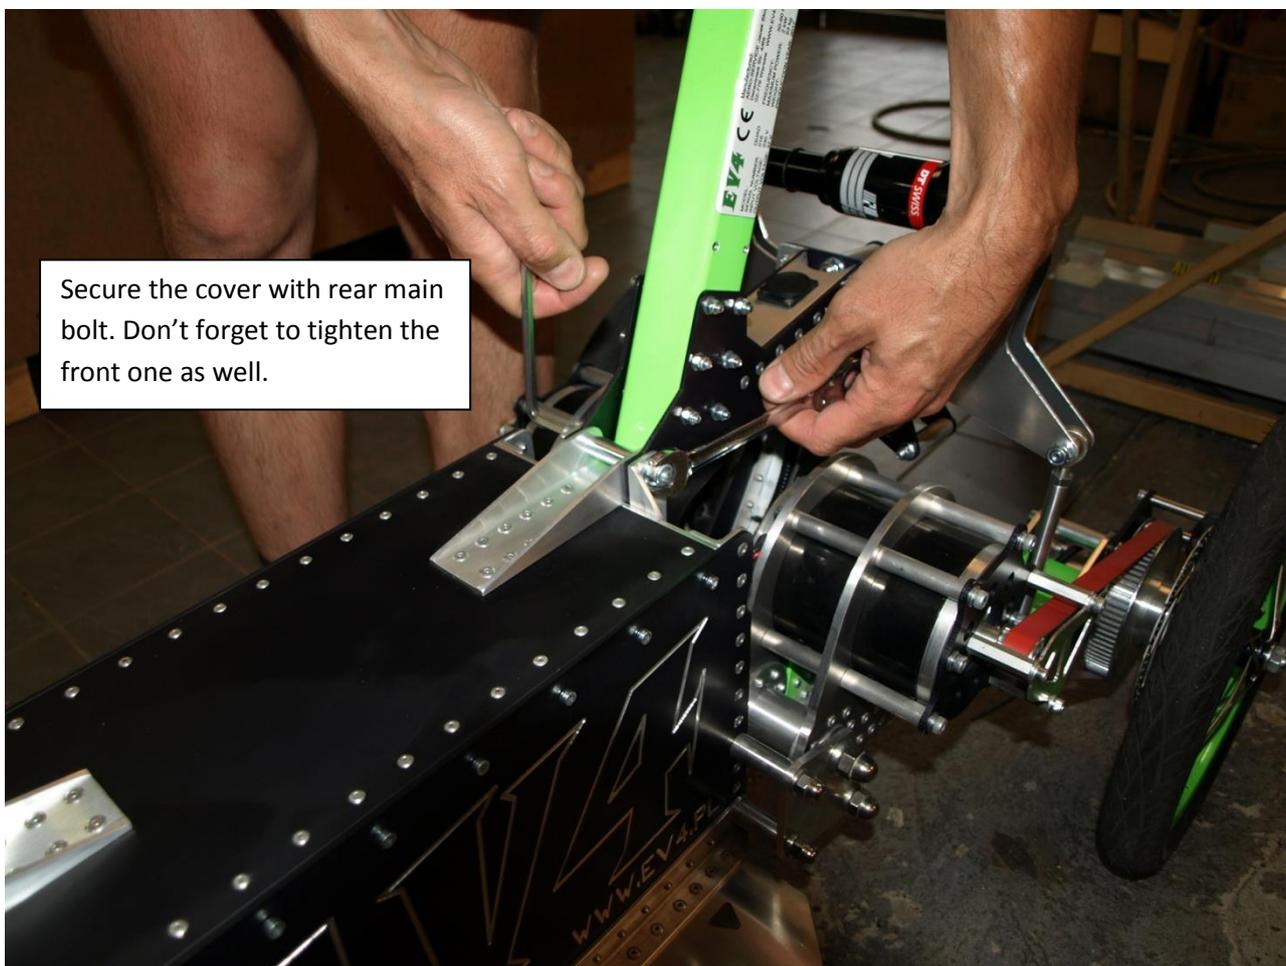

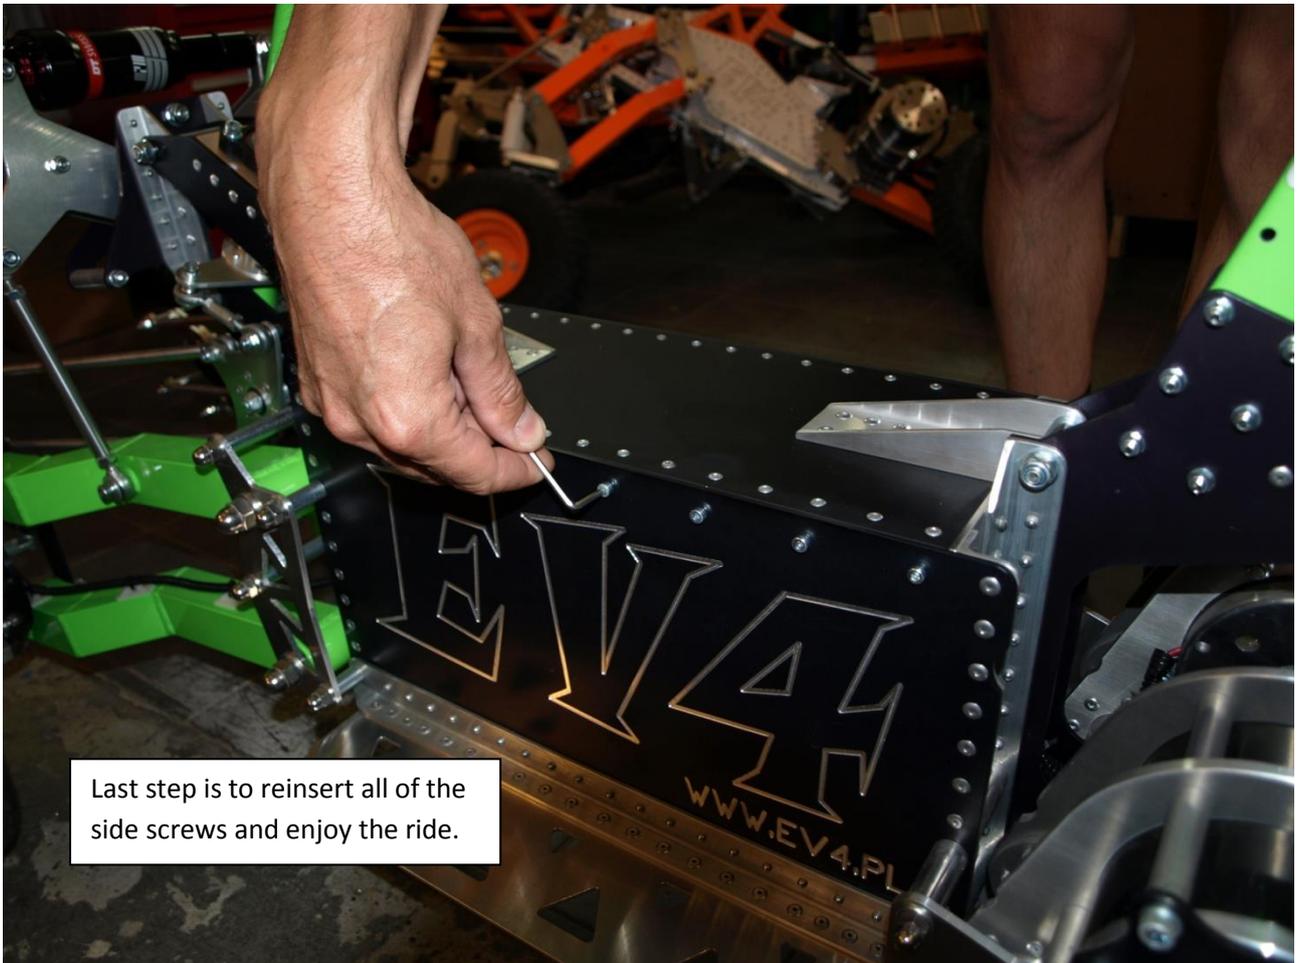

Last step is to reinsert all of the side screws and enjoy the ride.

If the EV4 does not start please check if all cables were properly connected. Wires that haven't a number attached to them don't need to be connected to anything. If the vehicle still does not start please refer to the manual to check the fuse or contact the manufacturer for advice.